

Paw Brothers®

Professional Hybrid Cage

PBP89440C



Assembly Instructions

Initial Inspection

When your Paw Brothers® Professional Hybrid Cage arrives, check immediately for signs of shipping damage. If you notice damage, save the shipping carton for claim purposes, and immediately report the problem to your supplier and to the shipping company.

Caution: Use safety gloves when handling all parts. Some edges may be sharp.

Read all instructions.

Tools required for assembly: # 3 Phillips Screwdriver and 2 hex head wrenches (included)

Parts List:

1	Door Assembly	PBP89487
2	26" X 43.75" Panels	PBP89487-1
2	26" X 31.5" Panels	PBP89487-2
1	Back Panel	PBP89487-3
1	Divider Panel Holder	PBP89487-4
1	Protective Floor Grate Cover	PBP89487-5
2	Door Extension Bars with 4 long screws	PBP89487-6
2	Hex Head Wrenches	PBP89478-1
1	Bag of Self-Tapping Sheet Metal Screws	PBP89478-2
12	Hex Head Fasteners	PBP89478-4
2	Floor Grates	PBP89467
2	ABS Plastic Pans	PBP89458

Optional Items Sold Separately:



1	Cage Divider Panel	PBP89461
1	Wheel Frame Assembly—Half bank	PBP49483
1	Wheel Frame Assembly—Full bank	PBP89482

Assembly Instructions:

Step 1. Unpack all cage parts and compare all the pieces to the parts list.




Step 2. Using a #3 Phillips screwdriver, put one 26" X 31.5" panel and one 26" X 43.75" panel together with sheet metal screws. The flanges face out as shown in Figure A below.

Step 3. Assemble the next 26" X 43.75" panel to the other two panels as in Figure B.

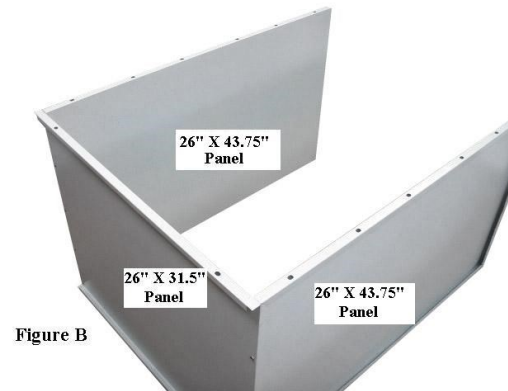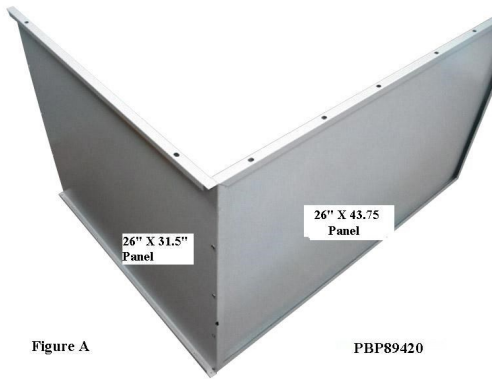



Step 4. Assemble the remaining 26" X 31.5" panel to the other three panels with sheet metal screws as shown in Figure C.

Step 5. Place the Door Assembly on top of the four panels as shown in Figure D. Secure the door assembly with the 12 Hex Head Fasteners as shown in Figure E.

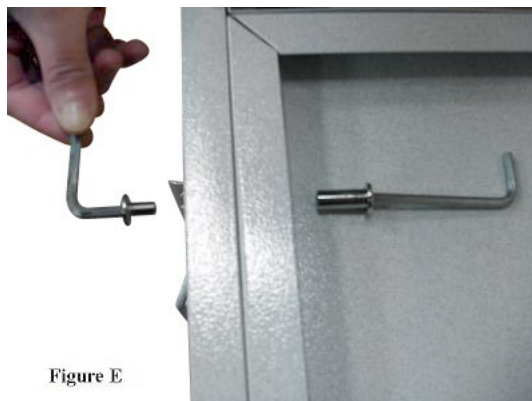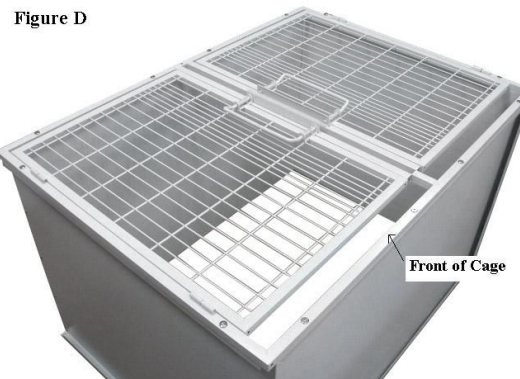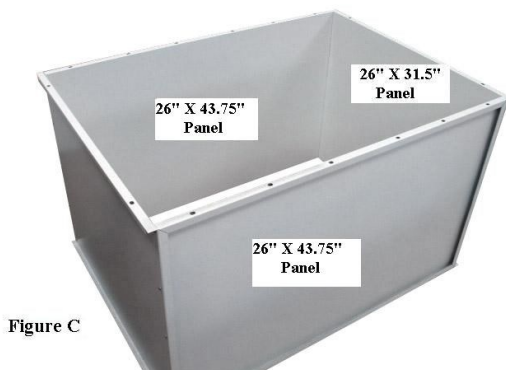

Step 6. Install the Divider Panel Holder onto the Back Panel with two screws. Assemble the Back Panel to the cage making sure the Divider Panel Holder is placed in the right direction as shown in Figures F and F1.

NOTE! For proper panel alignment, do not completely tighten the screws on the back panel until each hole has a screw inserted.

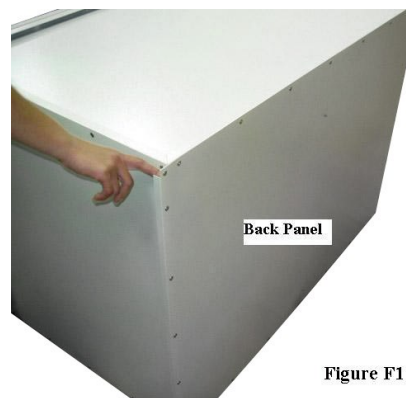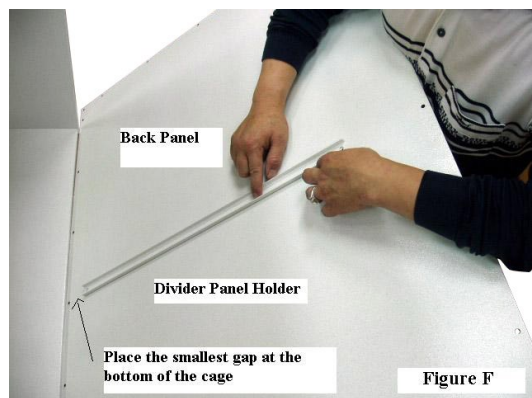

Installation of the Divider Panel Extension Bar

The divider panel extension bar is needed whenever the floor grates and pans are not used. The divider panel, when used, will slide on top of the extension bar. Install the divider panel extension bar (Figure 1) as shown in Figures 2 and 3.

→
Note: The extended lips are on top.



Figure 1

Divider Panel Extension Bar



Figure 2



Figure 3


Floor Grate and Pan Installation

Place both Floor Grates in the cage and install the Protective Floor Grate Cover (Figure H) in the middle of the cage between the floor grates. If the grate cover slides from side to side in the back of the cage, the divider panel holder is upside down. If so, remove the back panel and re-install it correctly. Slide each ABS Plastic Pan underneath the grates as shown in Figure H1.



Protective Floor Grate Cover

Figure H

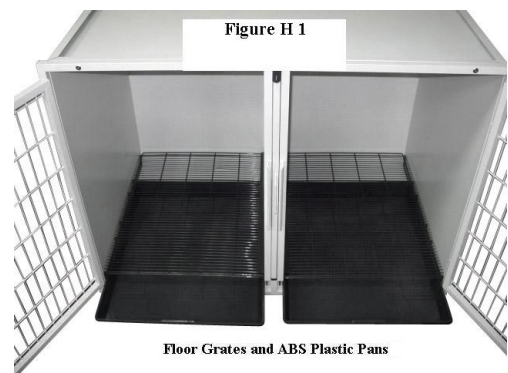

Floor Grates and ABS Plastic Pans