



**Pro Electric Grooming Table
PBP89325/89326**



**Service Manual
&
Warranty Information**

Your Paw Brothers® Pro Electric Grooming Table features a removable table top for easy cleaning and a “Z” shaped base that eliminates wobbling and tipping. The all metal frame is strong and long lasting. An antistatic baked epoxy finish adds style and durability. The removable top is covered by a premium non-slip rubber surface. Dual sided foot controls allow the heavy-duty electric motor to adjust the table top from 26” to 40”, with a maximum lifting capacity of 200 lbs.

In the unlikely event your table should need repair the following replacement parts are available:

Electric Motor

Motor Control Unit / Control Box

Electric Foot Switch

Leg Levelers


Grooming Arm

Initial Inspection

When your Paw Brothers® Pro Electric Grooming Table arrives, check immediately for signs of shipping damage. If you notice damage, save the shipping carton for claim purposes, and immediately report the problem to your supplier and to the shipping company. Also, save the carton for shipping in case your product ever needs repair at a remote location.

Tools Required for service: #2 Phillips Head Screwdriver
 Set of metric wrenches or sockets
 Pliers or cable cutter

Pro Electric Grooming Table Service Instructions

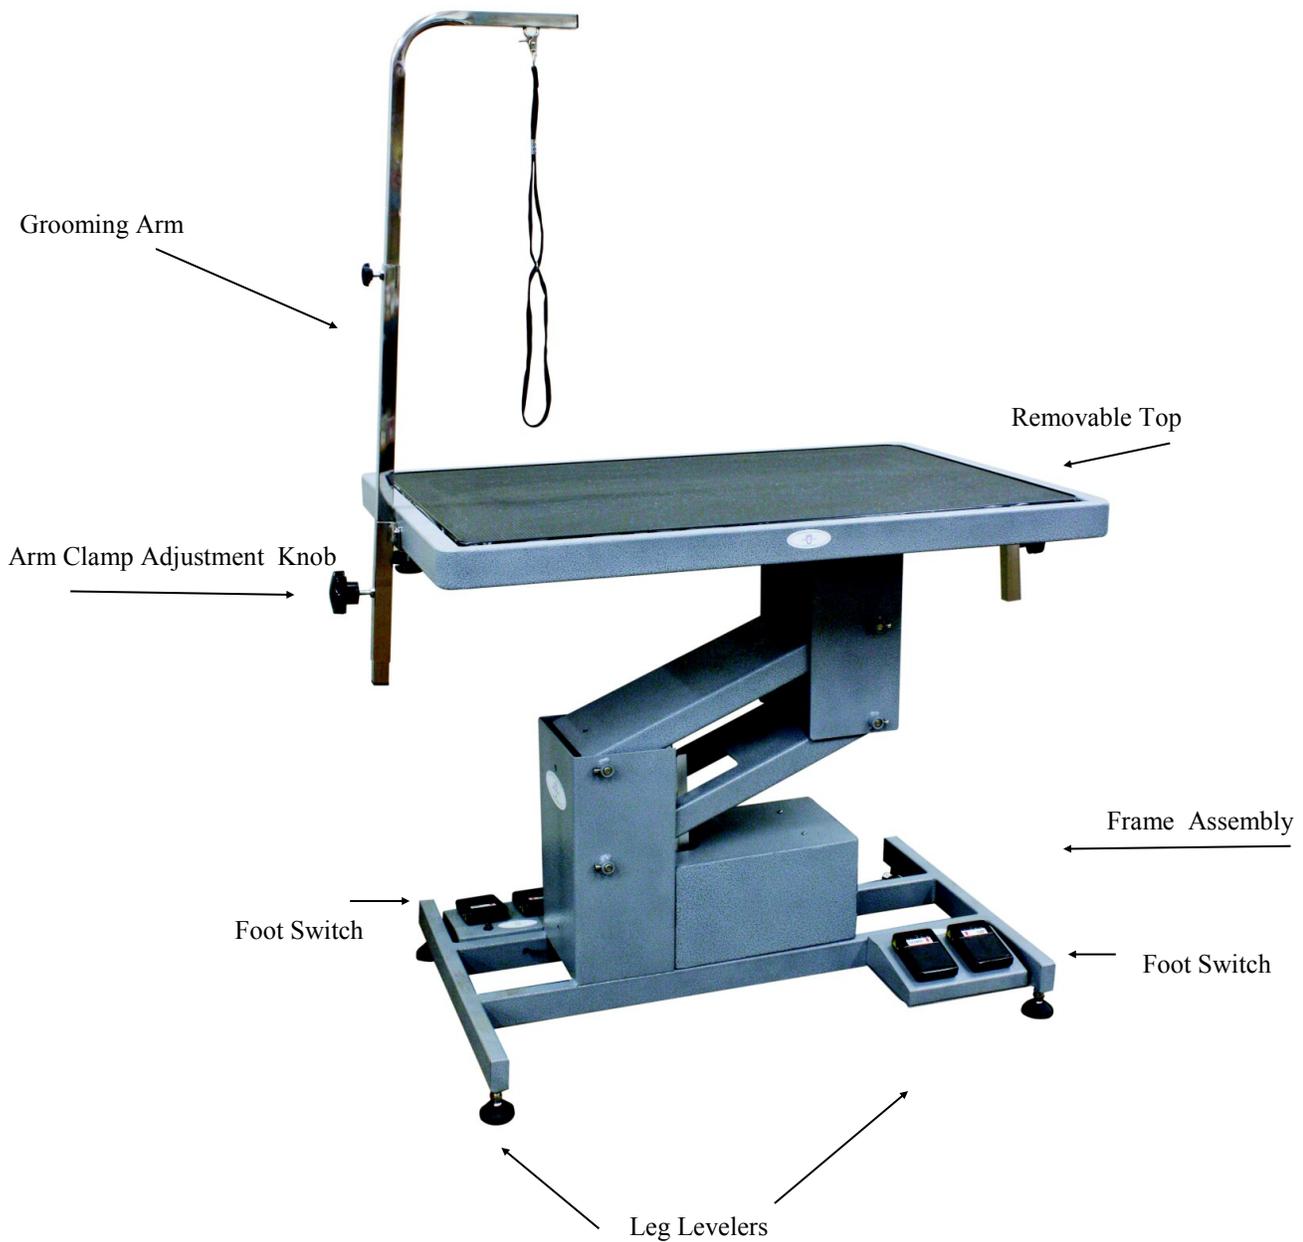

Caution: The electric table is heavy. Two people are required for these procedures.

Warning!
Disconnect all electrical power to the table before proceeding with any repairs.

Electric Motor/ Motor Control Unit Replacement

Step 1: Disconnect the power cord from the wall socket. Remove the table top from the frame assembly, and set it aside. Remove the grooming arm. Turn the entire frame assembly upside down and place it on a protective surface to avoid marring the epoxy finish.

Step 2: Remove the cotter pin and the retaining bolt holding the top portion of the electric motor to the frame assembly, as shown in Figure 1.

A cotter pin and retaining bolt hold the top portion of the electric motor to the frame assembly



Figure 1

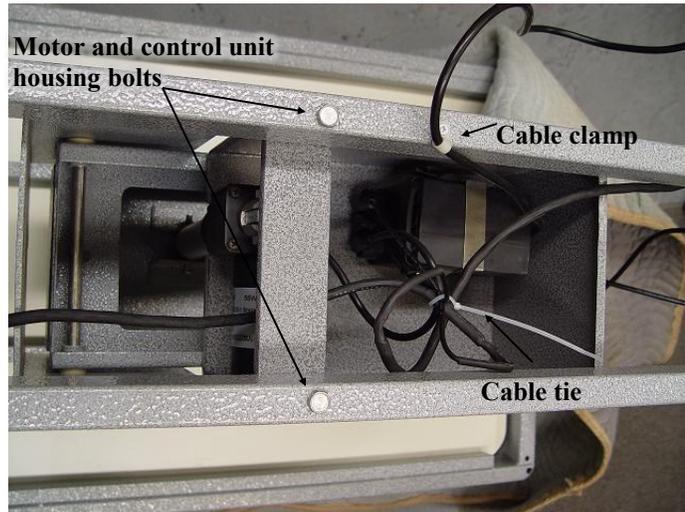


Figure 2

Step 3: Cut the plastic cable tie holding the wire bundles together. Disconnect the three cable connectors from the motor control unit by pulling them straight out from the unit.

Step 4: Remove the two bolts that hold the metal housing for the electric motor and the motor control unit. Remove the cable clamp. See Figure 2.

Step 5: Using help, lift the frame assembly up, and remove the entire motor housing assembly.



**Motor Housing Assembly Components
Components Subject to Change**

Step 6: If replacing the electric motor, remove the bolt and nut holding the motor to the housing. If replacing the motor control unit, remove the two screws that hold the retaining clamp for the control unit.

Step 7: Install the new electric motor or the control unit in the reverse order from above.

Step 8: Re-install the metal housing unit to the frame assembly.

Step 9. Carefully connect all cables to the motor control unit. **DO NOT FORCE THE CONNECTORS INTO THE SOCKETS.** Re-install the cable clamp, and re-tie the cable bundle together.

Step 10: Re-install the cotter pin and retaining bolt, for the top of the motor, to the frame assembly.

Step 11: Turn the table upright, put the table top on and grooming arm on, and plug the power cord into an electrical wall outlet.

Step 12: Test the table for proper operation.

Foot Switch Replacement

Step 1: Disconnect the foot switch cable connector from the motor control unit.

Step 2: Remove the three screws holding the foot switch to the frame assembly.

Step 3: Install the new foot switch in the reverse order, and re-connect the cable to the motor control unit.

Step 4: Test the table for proper operation.



Foot Switch

Statement of Limited Warranty

Warranty Period

Your electric grooming table is warranted against manufacturing defects in materials and workmanship, to the original purchaser, after the date of purchase, for twelve months for parts only. During the warranty period components that do fail may be repaired or replaced at the discretion of G & G Distribution, Inc. Any warranty claims must be accompanied with a copy of the original purchase invoice.

For warranty service call 1-800-525-7387.

Warranty Exclusions

This warranty does not cover failures or damages resulting from misuse, accidents, modifications, unsuitable physical or operating environments, acts of nature, transportation damages, or improper maintenance.

Limitation of Liability

Under no circumstances is the supplier liable for third party claims against you for damages, special, incidental, or indirect damages, or for any economic consequential damages, or lost profits, business revenue, goodwill or anticipated savings. Some states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.